


### TEMA AD600 VoIP SIP Module

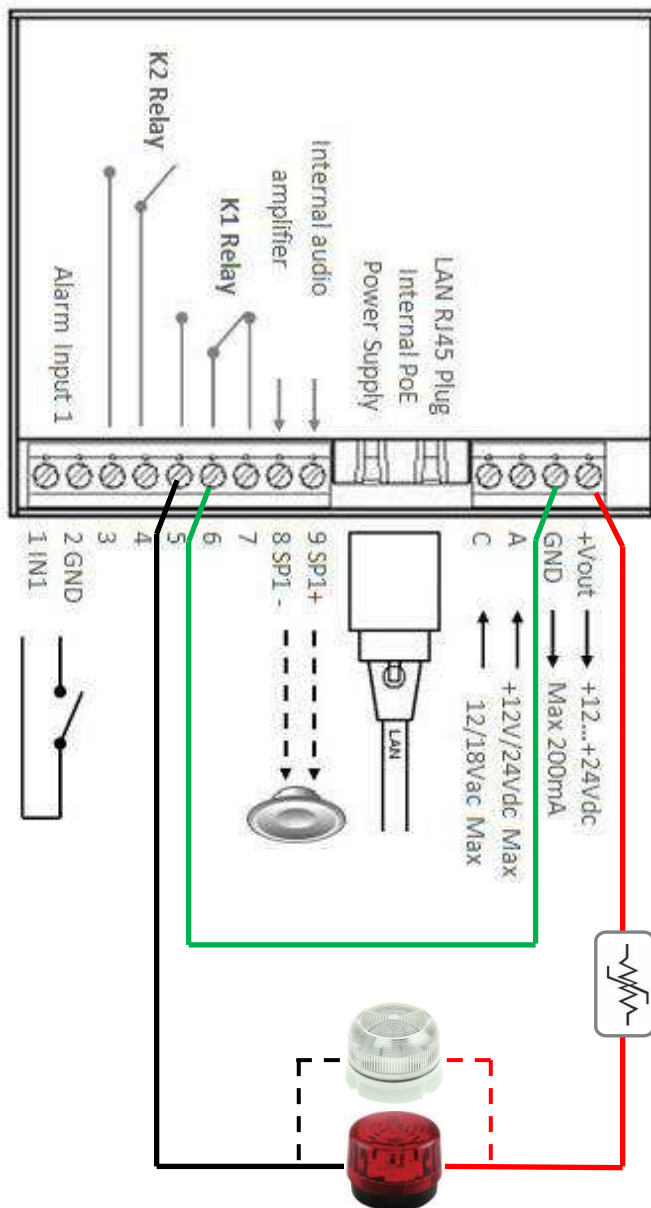

Flashing light at 12-24Vdc (Max 2 in parallel)


Connect the flash light to the terminal + Vout with the red wire (possibly interposing a short-circuit protection), connect the black flash light wire to terminal number 5 of the module, then make a bridge with wire between terminal number 6 and terminal called GND. Then program in the "Relay and alarm inputs settings" screen the relay 1 in "2 - In Call" mode and press "APPLY" (see next page), in this way the flash light will be activated for the duration of the announcement or communication.

If it is wanted that the flash light is also active on the 2nd SIP account reserved for repeating a call with the PBX in Night Service ("Night Ringer" service, by inserting this account in a "Night" group of PBX) open the "SIP parameters" mask and put a tick next to Relay K1 and press "APPLY" (See next page).

(\*) Note: the images and the dimensions of the flashing lights are indicative, they can be different from the supplied product, see datasheet.

### Relay and alarm inputs settings

#### RELAY 1

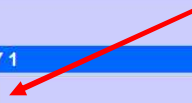Mode:  

PHONE activation:

Activation time (sec):

Close call:

#### RELAY 2

Mode:

PHONE activation:

Activation time (sec):

Activation delay (sec):

Close call:

#### ALARMS - INPUT SIGNALS

INPUT	Call..	Retry	Separation	Delay	Inversion	Stop code	Announce
1	<input type="text" value=""/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="checkbox"/>	<input type="text" value=""/>	<input type="checkbox"/>
2	<input type="text" value=""/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="checkbox"/>	<input type="text" value=""/>	<input type="checkbox"/>
3	<input type="text" value=""/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="checkbox"/>	<input type="text" value=""/>	<input type="checkbox"/>
4	<input type="text" value=""/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="checkbox"/>	<input type="text" value=""/>	<input type="checkbox"/>
5	<input type="text" value=""/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="checkbox"/>	<input type="text" value=""/>	<input type="checkbox"/>
6	<input type="text" value=""/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="checkbox"/>	<input type="text" value=""/>	<input type="checkbox"/>

### SIP parameters

#### REGISTERED

SIP server address:

port:

domain:

outbound proxy:

local sip port:

SIP account user:

password:

expiration (sec):


#### Ringer group

2° SIP account user:


password:

volume:  (1..9)

ampli on:

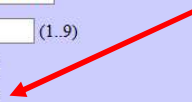relay 1:  

relay 2:

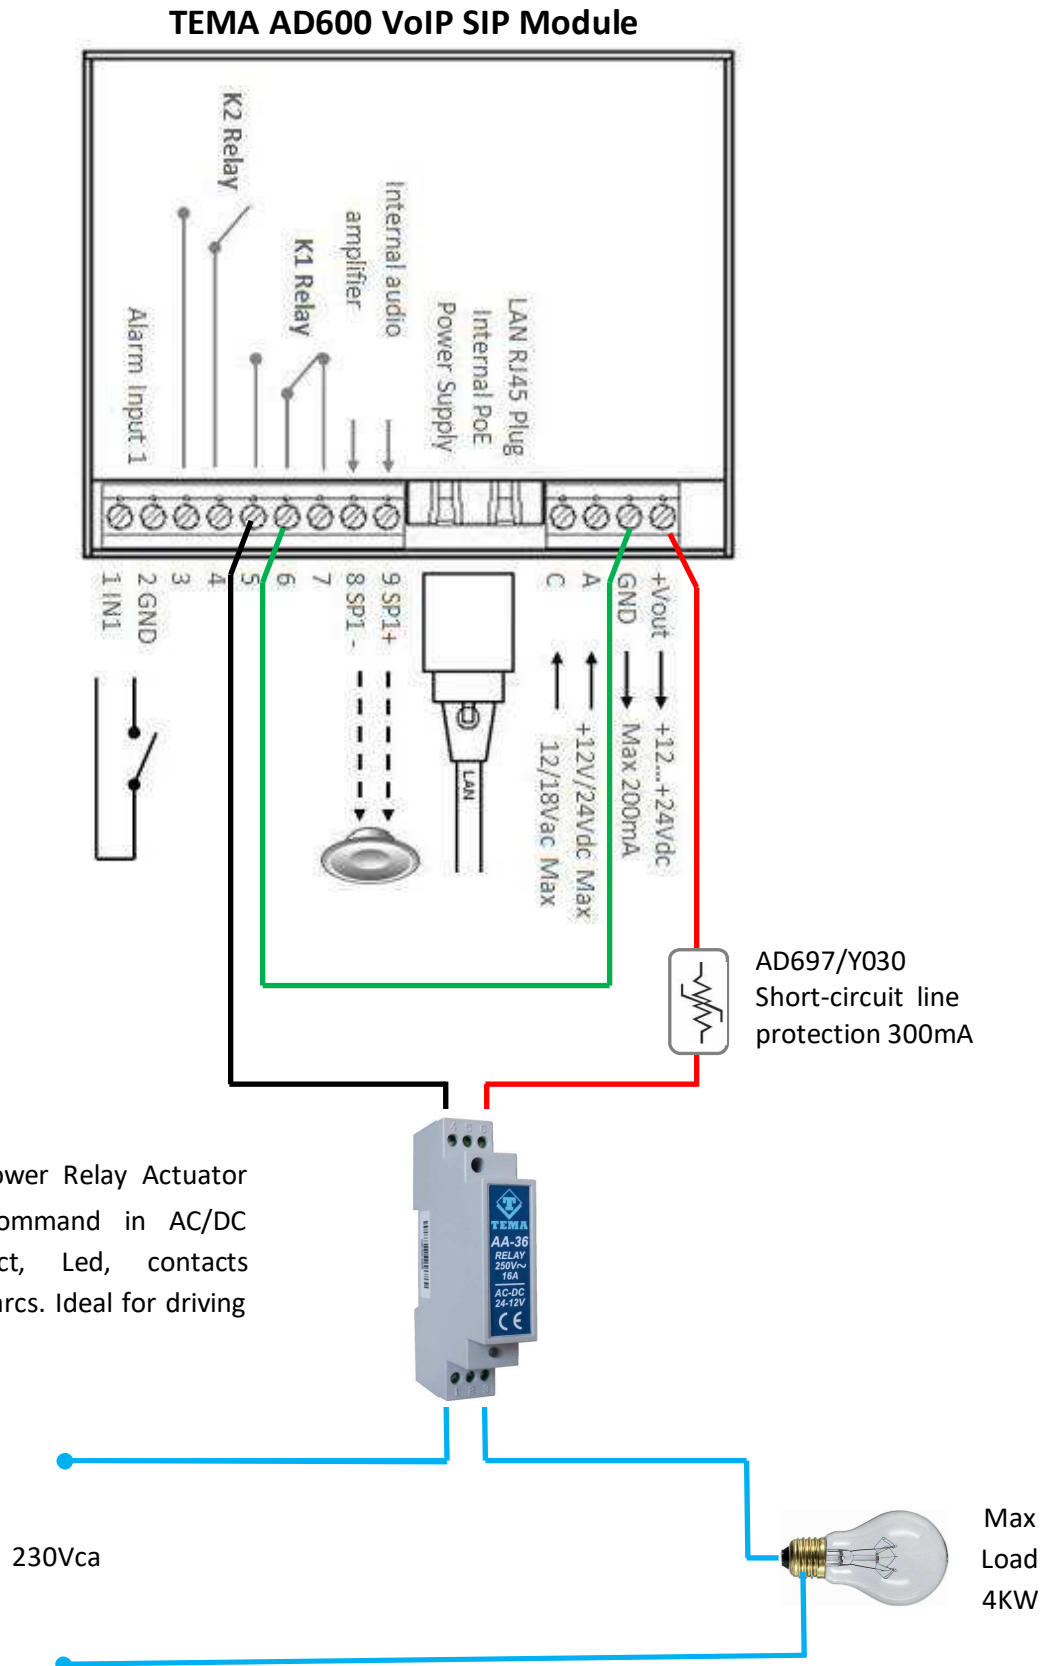



Blank page

---